HKS
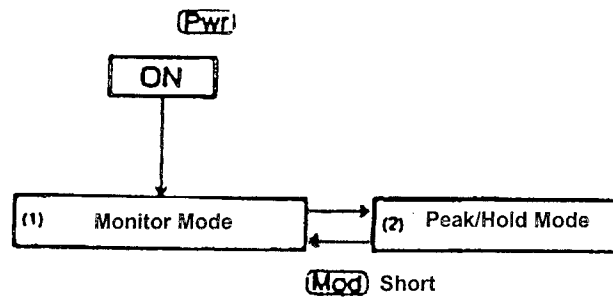
EVC IV-Si Silver (Limited Version)
Part Number 4503-RA009A
Supplement Instructions

PEAK/HOLD FUNCTION
While in "monitor mode", press the "Mod" button. "Monitor" will be flashing. The EVC will display the highest boost level it sees until its reset. To reset the peak/hold feature, press the "Sbc" button. Press the "Mod" button again to return back to "monitor mode".

(Pwr)

| ON |

| (1)   Monitor Mode | ⇄ | (2)   Peak/Hold Mode |

(Mod) Short

*Note: The EVC does not have to be in peak/hold mode in order to record the peak boost level.

UPDATED FLOW CHART
For "Offset", "Scramble Boost Settings" and "Warning Boost Setting" Modes.

(Pwr)

Detailed flowchart of how to get to each different mode. By pushing the "Mod" button once you will progressively go in this loop.

| ON |

Long (1 sec.)

(1) Monitor Mode		(2) Offset Mode		Scramble Boost (3) Setting Mode
High Mode	(Mod) →	"High" Offset Setting		(Mod)
(Alt)		(Alt)		Scramble Time (4) Setting Mode
Low Mode		"Low" Offset Setting		(Mod)
				Warning Boost (5) Setting Mode

Mod